



### Removal

---

- 1 Remove both top screws from rear panel.

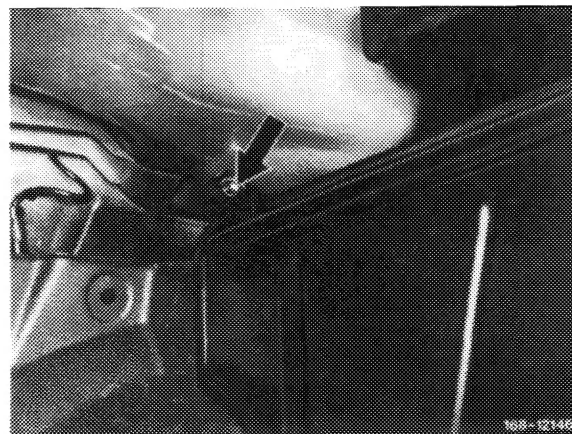

- 2 Remove both bottom screws from trunk floor plate and take out partition.

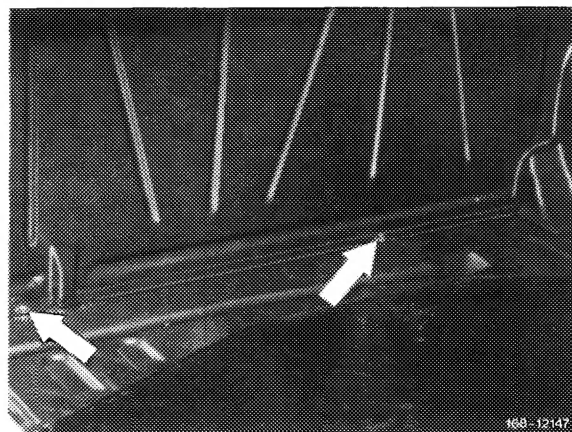

### Installation

---

**Note:** Before installation of partition two foam rubber liners must be pasted between fuel tank and partition.

- 3 Continue installation in reverse sequence of removal.

